
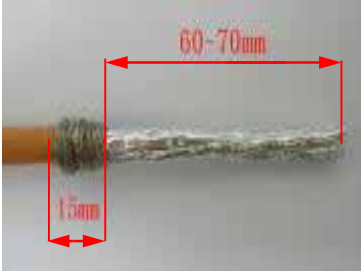
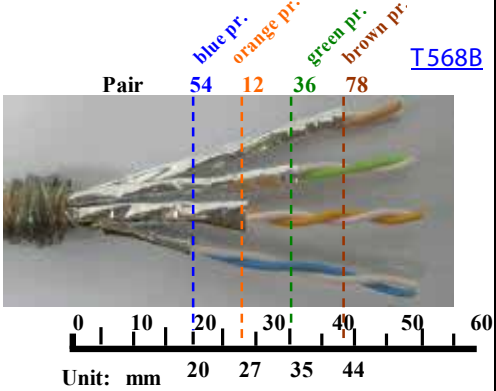






Montageanleitung für Cat.6 Patch Panel 8-12 Port Full shielded patch panel installation instruction

<div style="background-color: #0056b3; color: white; text-align: center; padding: 5px; font-weight: bold; font-size: 24px;">1</div>  <p>Abdeckung demontieren Open the aluminum cover.</p>	<div style="background-color: #0056b3; color: white; text-align: center; padding: 5px; font-weight: bold; font-size: 24px;">2</div>  <p>Kabelmantel abisolieren, Geflechschirm umschlagen Strip cable jacket, fold back braid shield</p>	 <p>Paarfolien vorbereiten Prepare pair foils</p>																		
<div style="background-color: #0056b3; color: white; text-align: center; padding: 5px; font-weight: bold; font-size: 24px;">3</div>  <table style="width: 100%; border: none;"> <tr> <td style="text-align: center; border-bottom: 1px solid black;"><u>T568A</u></td> <td style="text-align: center; border-bottom: 1px solid black;"><u>T568B</u></td> </tr> <tr> <td>Pin 5 White/Blue</td> <td>Pin 5 White/Blue</td> </tr> <tr> <td>Pin 4 Blue</td> <td>Pin 4 Blue</td> </tr> <tr> <td>Pin 1 White/Green</td> <td>Pin 1 White/Green</td> </tr> <tr> <td>Pin 2 Green</td> <td>Pin 2 Orange</td> </tr> <tr> <td>Pin 3 White/Orange</td> <td>Pin 3 White/Green</td> </tr> <tr> <td>Pin 6 Orange</td> <td>Pin 6 Green</td> </tr> <tr> <td>Pin 7 White/Brown</td> <td>Pin 7 White/Brown</td> </tr> <tr> <td>Pin 8 Brown</td> <td>Pin 8 Brown</td> </tr> </table> <p>Farbcode wählen und Aderpaare in die LSA-Kontakte legen Follow the direction on the color-coding sticker to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.</p>	<u>T568A</u>	<u>T568B</u>	Pin 5 White/Blue	Pin 5 White/Blue	Pin 4 Blue	Pin 4 Blue	Pin 1 White/Green	Pin 1 White/Green	Pin 2 Green	Pin 2 Orange	Pin 3 White/Orange	Pin 3 White/Green	Pin 6 Orange	Pin 6 Green	Pin 7 White/Brown	Pin 7 White/Brown	Pin 8 Brown	Pin 8 Brown	<div style="background-color: #0056b3; color: white; text-align: center; padding: 5px; font-weight: bold; font-size: 24px;">4</div>  <p>Aderpaare mit Einlegewerkzeug auflegen Paarfolie erst ca. 2mm vor der LSA Leiste Kürzen! Install twisted pairs with LSA tool Cut pairfoils not more than ca. 2mm to LSA terminal!</p>	
<u>T568A</u>	<u>T568B</u>																			
Pin 5 White/Blue	Pin 5 White/Blue																			
Pin 4 Blue	Pin 4 Blue																			
Pin 1 White/Green	Pin 1 White/Green																			
Pin 2 Green	Pin 2 Orange																			
Pin 3 White/Orange	Pin 3 White/Green																			
Pin 6 Orange	Pin 6 Green																			
Pin 7 White/Brown	Pin 7 White/Brown																			
Pin 8 Brown	Pin 8 Brown																			
<div style="background-color: #0056b3; color: white; text-align: center; padding: 5px; font-weight: bold; font-size: 24px;">5</div>  <p>Kabelschirm unter die Klemmen legen und handfest anziehen Fasten the screws through metal case to hold tightly down for two cable jackets in the same time.</p>																				
<div style="background-color: #0056b3; color: white; text-align: center; padding: 5px; font-weight: bold; font-size: 24px;">6</div>  <p>Installierte Kabel mit Kabelbindern zugentlasten Use cable ties for strain relief</p>																				