

PHOTOELECTRIC DETECTOR  
**AX-70TN, AX-130TN, AX-200TN**  
**AX-100TF, AX-200TF**

&lt; STANDARD &gt;



&lt; 4 SELECTABLE BEAM FREQUENCIES &gt;

**Features**
**< AX-70/130/200TN, AX-100/200TF >**



- High-performance waterproof structure
- Horizontal alignment dial for user-friendliness
- Adjustable beam interruption period
- Tamper function
- Optional Accessories : Heating unit (HU-3), Back cover (BC-3), Pole side cover (PSC-3)


**< AX-100/200TF ONLY >**


- 4 selectable beam frequencies
- LED indicator for fine beam alignment level
- D.Q. circuit (Environmental disqualification)
- Alarm memory










**For Safe Use of the Product**

- Read this instruction manual carefully prior to installation.
- After reading, store this manual carefully in an easily accessible place for reference.
- This manual uses the following warning indications for correct use of the product and harm to you or other people and damage to your assets, which are described below. Be sure to understand the description before reading the rest of this manual.

 <b>WARNING</b>	Failure to follow the instructions provided with this indication and improper handling may cause death or serious injury.
 <b>CAUTION</b>	Failure to follow the instructions provided with this indication and improper handling may cause injury and / or property damage.

 This symbol indicates prohibition. The specific prohibited action is provided in and/or around the figure.

 This symbol requires an action or gives an instruction.

 <b>WARNING</b>	Do not use the product for purposes other than the detection of moving objects such as people and vehicles. Do not use the product to activate a shutter, etc., which may cause an accident. 
	Do not touch the unit base or power terminals of the product with a wet hand (do not touch when the product is wet with rain, etc.). It may cause electric shock.  
	Never attempt to disassemble or repair the product. It may cause fire or damage to the devices. 
 <b>CAUTION</b>	Do not exceed the voltage or current rating specified for any of the terminals during installation, doing so may cause fire or damage to the devices. 
	Do not pour water over the product with a bucket, hose, etc. The water may enter, which may cause damage to the devices. 
	Clean and check the product periodically for safe use. If any problem is found, do not attempt to use the product as it is and have the product repaired by a professional engineer or electrician. 

## CONTENTS

**1. PRECAUTIONS**
**2. PARTS IDENTIFICATION**
**3. INSTALLATION**

3-1 NOTE

3-2 INSTALLATION METHOD

**4. WIRE CONNECTION**
**5. ALIGNMENT**

5-1 OPTICAL ALIGNMENT

5-2 BEAM INTERRUPTION TIME

5-3 4 SELECTABLE BEAM FREQUENCIES \* TF ONLY

**6. WALK TEST**
**7. SPECIAL FUNCTION \* TF ONLY**

7-1 ENVIRONMENTAL DISQUALIFICATION

7-2 ALARM MEMORY

**8. OPTIONAL ACCESSORIES**

8-1 HEATING UNIT : HU-3


8-2 BACK COVER : BC-3

8-3 POLE SIDE COVER : PSC-3


**9. TROUBLE SHOOTING**
**10. SPECIFICATIONS**

## 1. PRECAUTIONS


### 1. Mount unit only on a solid surface.

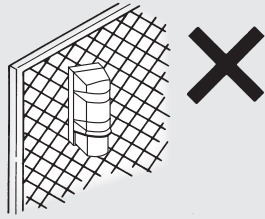


### 2. Do not install the unit where objects moved by the wind such as plants and laundry, which may block the beam.

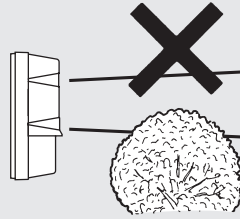


### 3. Prevent direct sunlight from entering into internal receiver.

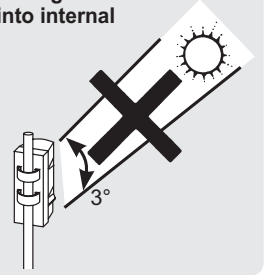


### 4. A different type of beam should not reach the receiver.

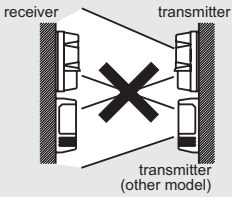


### 5. Avoid aerial wiring.

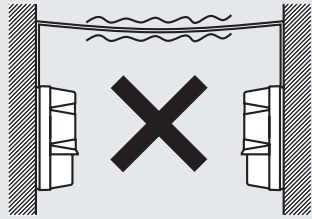


### 6. Do not install the unit on unsteady surfaces.

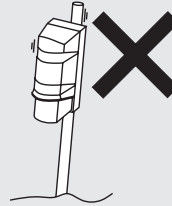

### 7. Mount the units more than 1m away from the wall or fence.

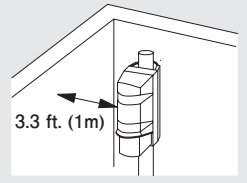

## 2. PARTS IDENTIFICATION

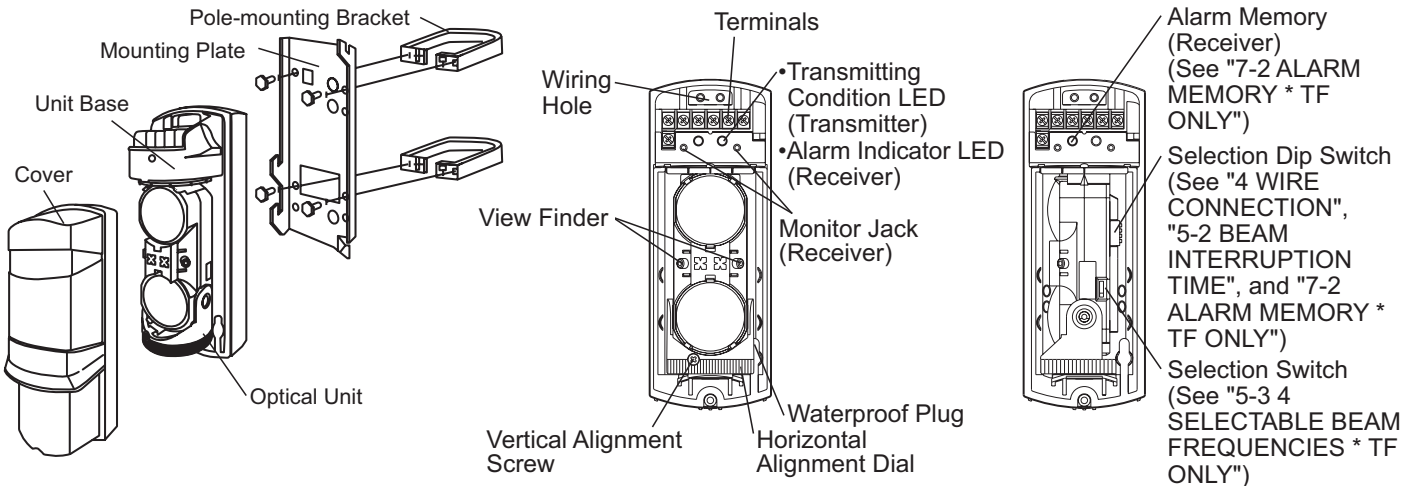


## 3. INSTALLATION


### 3-1. NOTE

#### 1. Detection range and installation


Distances between the Receiver and the Transmitter  
ex) AX-70TN : 70ft.(20m)

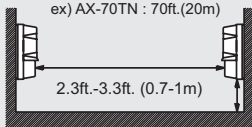

It is not recommendable to install the units in this way (or direction). In case you do this installation, maximum detection range shall be half of the original detection range. (This is to prevent the attenuation of beam by the edge of the cover.)

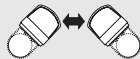


#### 2. Alignment angle

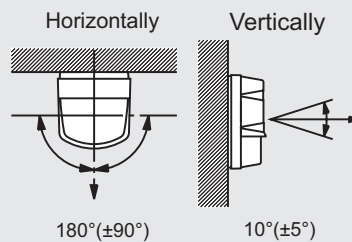


#### 3. Pole mounting

• Pole size should be 1 1/4"-1 7/8" (φ32-48mm).  
(Standard U.S. 1 1/4" or 1 1/2" pipe)  
about 2.0ft.(60cm)

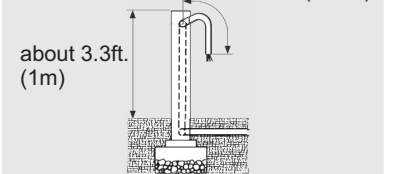

### 3-2. INSTALLATION METHOD

#### 1. Detach the cover and the screw

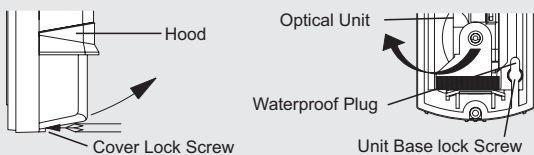


#### Note

When removing the cover, do not put your fingers on the hood, which may cause damage.

- 1) Loosen the cover lock screw to detach the cover.
- 2) Turn the optical unit and open the waterproof plug.
- 3) Loosen the unit base lock screw and slide the mounting plate downward to detach the unit base.


#### 2. Fix the mounting plate

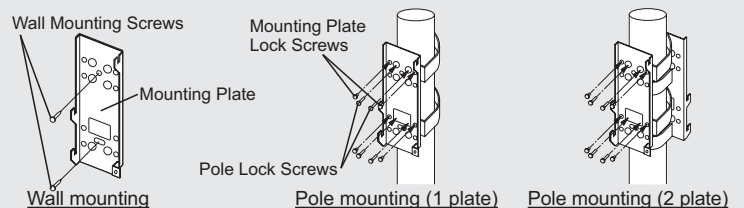

### 3. Wiring


Use wires in compliance with the following conditions:

- 1) Wire diameter:  $\phi 4 - 7\text{mm}$
- 2) When using any other wires than the above, seal the wiring port with a waterproof agent (silicon, etc.) to prevent water from coming in through the gap.
- 3) Number of wires: 3 (max.)

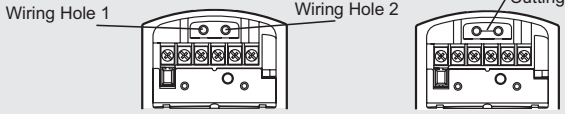



3 wires can be accommodated in a unit.  
Lead-in wire should be as below.

- \*Wiring hole 2 needs to be punched with a screw driver, etc.
- \*To have the wiring hole 3, wiring port needs to be cut with a cutter knife, etc. After inserting the wire, seal the wiring port with a waterproof material like silicon for leakage prevention.

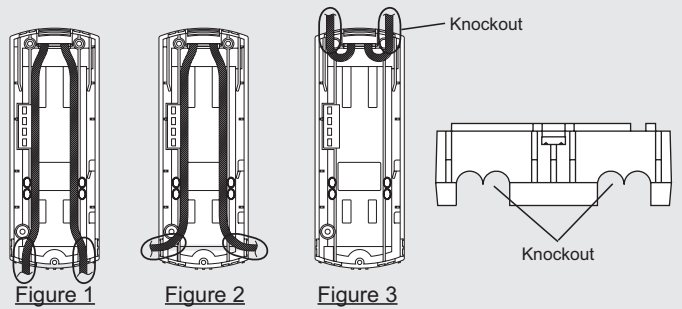

Wiring guide should be as below.  
Knockout needs to be opened with a nipper, etc.


### 4. Mount the unit base

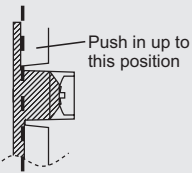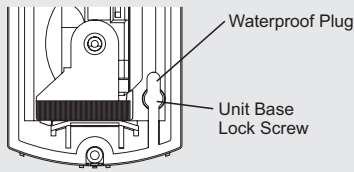



Side view of the waterproof plug

Connect the terminals with reference to "4. WIRE CONNECTION" and slide the unit base into the mounting plate from above, then fasten the unit base mounting screws to fix the unit base. Then, push in the waterproof plug up to the broken line shown in the figure above.

### 5. Alignment and walk test

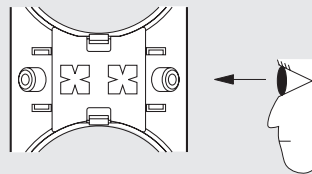

Align the optical axis to the maximum receiving level according to "5-1. OPTICAL ALIGNMENT". Then, check for the operation with reference to "6. WALK TEST".

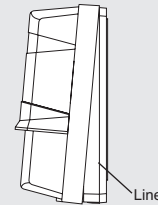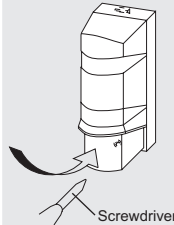

Put the cover and tighten the cover lock screw.  
Make sure that the cover edge has reached the line prepared on the side of the unit base (See the figure left)


## 4. WIRE CONNECTION

Connect respective wires to the terminals shown in the following figure.


#### 1. Terminal

[AX-70/130/200TN]

< Receiver >

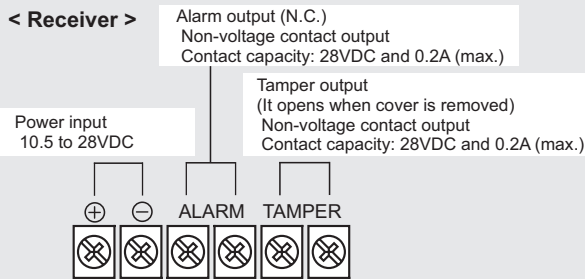


< Transmitter >

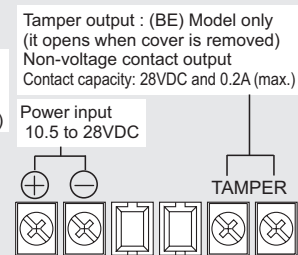


[AX-100/200TF]

< Receiver >

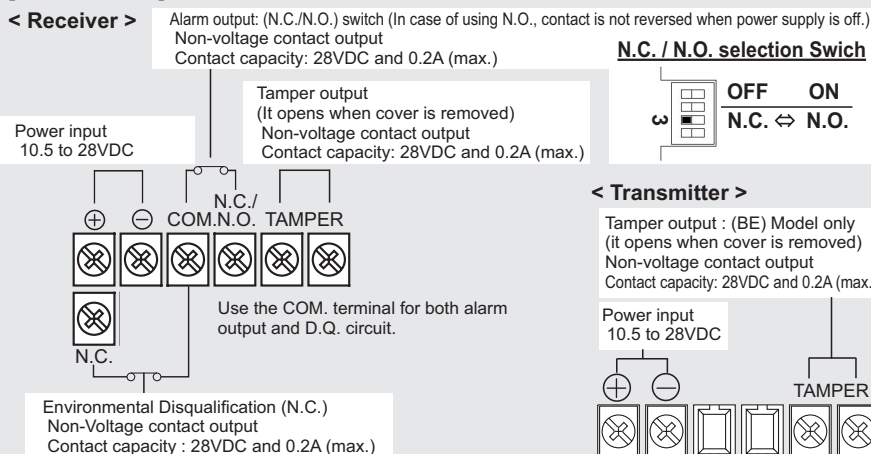

< Transmitter >

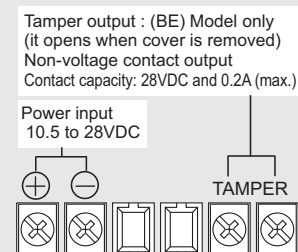

#### 2. Wiring distance between power supply and detector

- Ensure that the wiring distance from the power supply is within the range shown in the table on the right.
- When using two or more units on one wire, the maximum length is obtained by dividing the wire length listed below by the number of units used.

Wire size	Power supply voltage	
	12VDC	24VDC
AWG22 (0.33mm <sup>2</sup> )	1600ft.(500m)	7800ft.(2400m)
AWG20 (0.52mm <sup>2</sup> )	2200ft.(700m)	11400ft.(3500m)
AWG18 (0.83mm <sup>2</sup> )	3600ft.(1100m)	18000ft.(5500m)
AWG16 (1.31mm <sup>2</sup> )	5500ft.(1700m)	26200ft.(8000m)

**WARNING**

Do not exceed the voltage or current rating specified for any of the terminals during installation, doing so might cause fire or damage to the devices.



## 5. ALIGNMENT


### 5-1 OPTICAL ALIGNMENT

The optical alignment is an important adjustment to increase reliability. In accordance with the procedure indicated in the items 1. and 2. in this chapter, make sure to align the monitor jack that monitor output nothing to attain the maximum level.

#### 1. Rough alignment by viewfinder


- While looking through the viewfinder, turn the dial to make alignment in such a way that the other detector is at the center of the sights.

##### < Horizontal alignment >

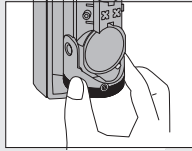


Turn the horizontal alignment dial by fingers to make alignment

##### < Vertical alignment >

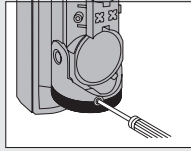

Turn the vertical alignment dial with a screwdriver to make alignment

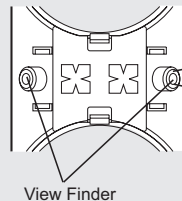


View Finder

\* For Horizontal/Vertical alignment, refer to the following illustration.

The alignment can be completed.

Realignment (example)

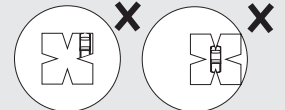

The beam is not properly aiming at the center of viewfinder.

#### 2. Checking of the illumination and Fine alignment

##### Checking of the illumination of the Alarm Indicator

- After the rough alignment using the viewfinder, check the light receiving status by the Alarm Indicator.

##### < Receiver >




Alarm Indicator


##### Fine adjustment with monitor jack

- After checking the receiving level of optical axis by using the alarm indicator, make sure to make fine alignment for both transmitter and receiver with voltmeter until it reaches maximum monitor output over "Good" level.

##### < Receiver >

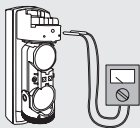

##### < Receiver / Transmitter >

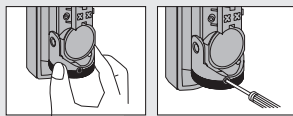

Set the voltmeter range to 5 to 10VDC and connect the voltmeter probes  $\oplus$  and  $\ominus$  to  $\oplus$  and  $\ominus$  of the monitor jack respectively.

The horizontal / Vertical alignment.

The relation between monitor output and receiving level of optical axis.

AX-70/130/200TN	Alarm Indicator	Light interrupting	Light receiving			
		ON(red)	OFF			
Monitor output	Realign Less than 2.2V		Fair 2.2V or more	Good 2.5V or more	Excellent 2.9V or more	

AX-100/200TF	Alarm Indicator	Light interrupting	Light receiving			
		ON(red)	fast flicker	slow flicker	OFF	
Monitor output	Realign Less than 1.0V		Fair 1.0V or more	Good 2.0V or more	Excellent 2.5V or more	

#### Note


When making the adjustment by the monitor jack, be careful not to intercept the optical unit with your hand, the tester pin cord, etc.

### 5-2 BEAM INTERRUPTION TIME


Initial setting is at 50ms for normal work.

According to the speed of a supposed target you select one specific setting out of 4 steps.

Set the interruption time adjustment switches of the Receiver according to the speed of the human object to detect.

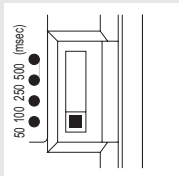


[AX-70/130/200TN]  
Selection Switch

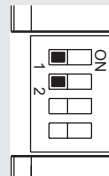


[AX-100/200TF]  
Selection Dip Switch

Interruption time	Switches
50ms	1:OFF, 2:OFF
100ms	1:OFF, 2:ON
250ms	1:ON, 2:OFF
500ms	1:ON, 2:ON

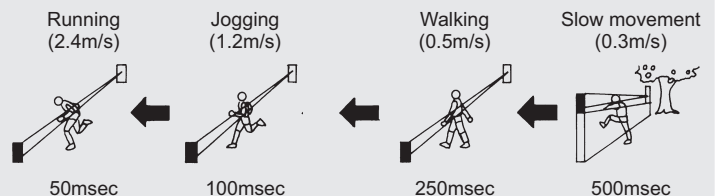

### 5-3 4 SELECTABLE BEAM FREQUENCIES \* TF ONLY

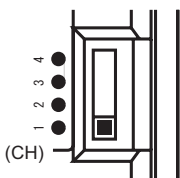

Selection Switch

The selectable beam frequencies can be used to avoid unwanted crosstalk that can occur when using multiple photo-beams for long distance or beam stacking applications.


- To select between 4 separate beam frequencies, use the switch provided.
- Make sure the receiver and transmitter that are facing each other are set to the same channel.
- More than double stacked application is not possible.

#### Note


Always switch the frequencies TWO channels apart when stacking units on top of one another (See following example). The upper unit is set on channel 1 while the lower is on channel 3.channels 2 and 4 could have also been used.

《EXAMPLE》

1. Long distance protection

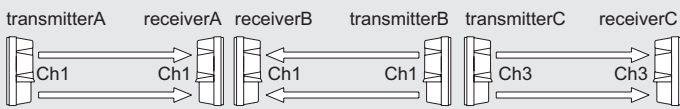


2. Double stacked long distance protection

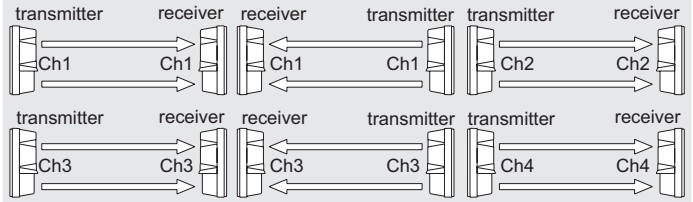


**Note** More than double stacked application is not possible.

3. Perimeter protection

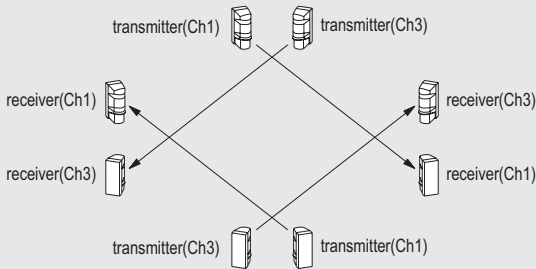

4. Double stacked long perimeter protection

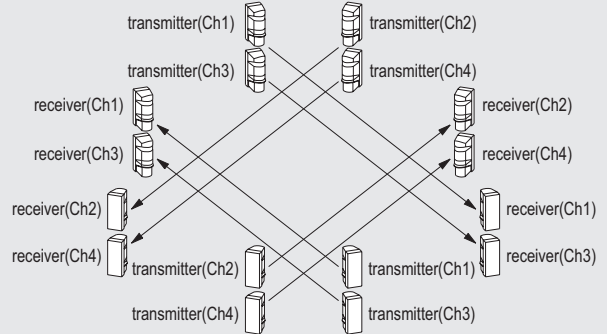

6. WALK TEST

Make sure to check for the operation after installation.


1. Checking by the Alarm Indicator

< Receiver >



Make sure that the Alarm Indicator is OFF. If it is illuminated even when the beams are not blocked, make optical alignment again.

2. Walk test

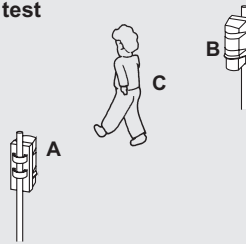

Be sure to conduct a walk test (to block the infrared beam) at the following tree point:

- A. In front of the Transmitter
- B. In front of the Receiver
- C. At the middle point between the Transmitter and the Receiver

If there are reflective things such as a fence, stop at the position C. once and make sure that the detector operates correctly.

**Note**

If the Alarm Indicator is not turned on after beam interception, check for the operation with reference to "9. TROUBLE SHOOTING."


7. SPECIAL FUNCTION \* TF ONLY

7-1 ENVIRONMENTAL DISQUALIFICATION

D.Q. will send a trouble signal which indicates the adverse weather condition when the beam strength is being kept more than 40 seconds.


adverse weather level > the beam strength > alarm output level

< Operating time chart >

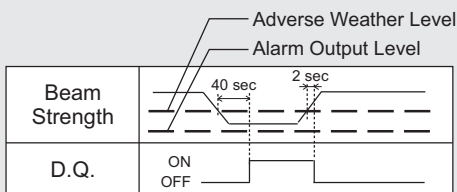


< Example >

[D.Q. + Alarm]

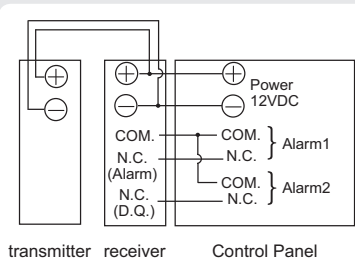

Use the COM. terminal for both alarm output and D.Q. circuit.

[Alarm Output Cancellation]

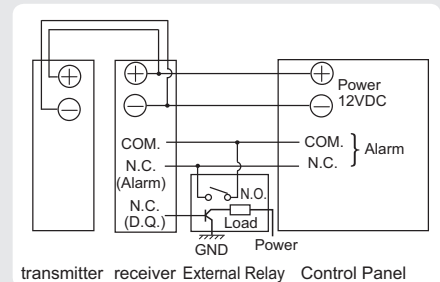


By using external relay (N.O.), alarm output can be cancelled while D.Q. send signal.

## 7-2 ALARM MEMORY \* TF ONLY

This function is used to indicate which detector was activated with alarm memory LED while several detectors are installed in one site.

For first 5 minutes after the alarm output, the alarm memory indicator do not light up. Then the alarm memory indicator keep lighting up for 55 minutes. 5 minutes. Alarm memory record is cleared after alarm memory indicator is turned off.


### < Receiver >

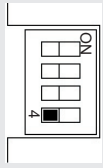

OFF ↔ ON  
(Indicator ON) (Indicator OFF)

### Selection Dip Switch

### < Indicator >

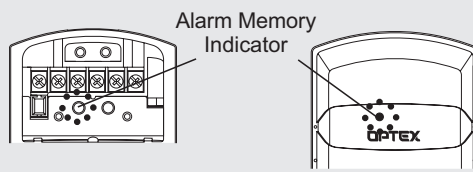


### Through the cover


### < Alarm Memory Indicator >

Number of blinking N (times) tells how long it passed over after alarm output. "N" is added one time every 5 minutes. (N=1-11)


### < Operating time chart >

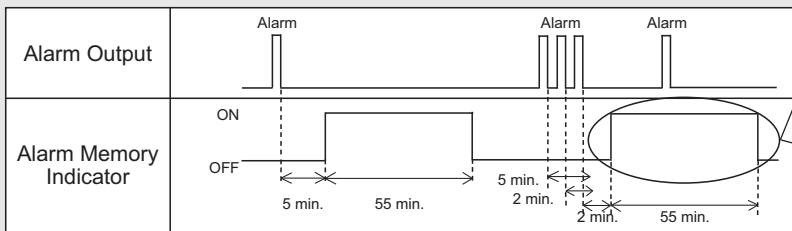

If there is an alarm output.

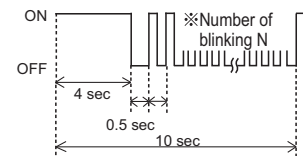

If it detects the environmental disqualification before 5 minutes of alarm output.

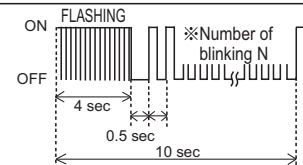


## 8. OPTIONAL ACCESSORIES

### 8-1 HEATING UNIT : HU-3

Power voltage of 24VAC/DC is required to use the heating unit.

**Note** In case the same power supply is used for the sensors, wiring distance is required according to the table shown in 3.


#### 1. Direction of the optical unit

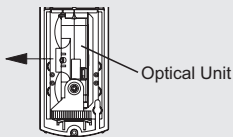


Front view of the unit base

Align the horizontal angle of the optical units beforehand in a direction where the transmitter and the receiver are expected to face each other.

#### 2. Cutout of the knockout

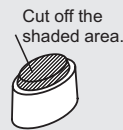


Knockout cutoff section

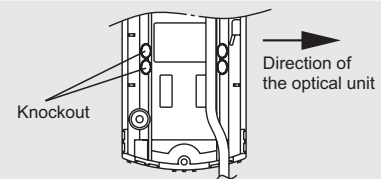

Rear view of the unit base


Cut off the knockout of the unit base's wiring holes located on the side where the optical units of the transmitter and receiver face each other and on its opposite side with a nipper, etc. In the case of the front side, cut off the knockout located on either left or right side only.

#### 3. Mounting and wiring of the heating unit

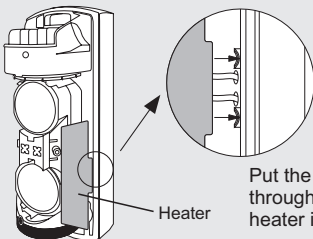

Put the power cable of the heater through the wiring hole, and install the heater in the unit base.

**Note** Be careful to install the direction of the heater.

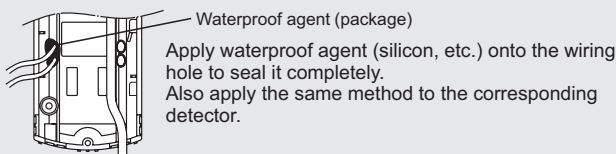


Waterproof agent (package)  
Apply waterproof agent (silicon, etc.) onto the wiring hole to seal it completely. Also apply the same method to the corresponding detector.

Ensure that the wiring distance from the power supply is within the range shown in the table on the right. When using two or more units on one wire, the maximum length is obtained by dividing the wire length listed below by the number of units used.

Wiring distance	
Wire Size	Wiring Distance
AWG18 (0.83mm <sup>2</sup> )	500ft. (150m)
AWG16 (1.31mm <sup>2</sup> )	850ft. (250m)
AWG14 (2.09mm <sup>2</sup> )	1300ft. (400m)


#### 4. Connection using the connector

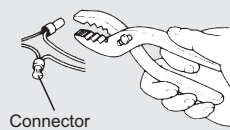

Connector

When connecting the lead wires to the wiring, make the connection using the supplied connector or soldering. Insert the wires into the connector and tighten the connections with pliers.


#### 5. Mounting of the unit base and optical alignment

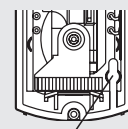

Unit Base Mounting Screw

#### Note

Do not add too much stress to heater when you mount it to the base unit.

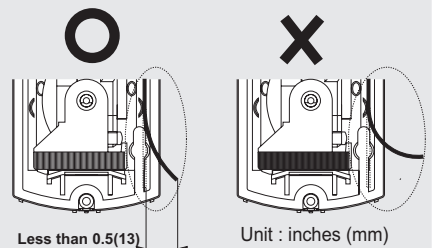


Less than 0.5(13)

Unit : inches (mm)

After mounting the units base, align the optical axis and check for the operation, then close the cover. (See "3. INSTALLATION")


## 8-2 BACK COVER : BC-3

### 1. Cutout of the knockout

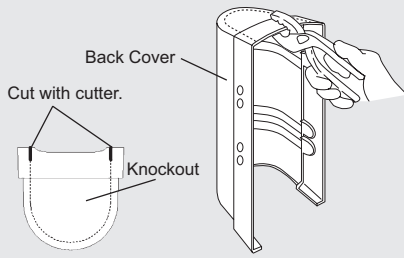

Cut off the knockout portion of the back cover with a cutter, etc.

### 2. Installation of mounting plate

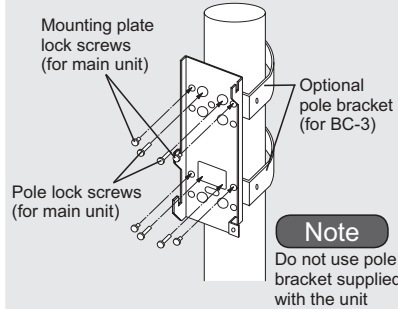


#### Note

Do not use pole bracket supplied with the unit

Fix the unit base body mounting-plate and the pole bracket for the option supplied with the back cover by using the supplied screws.


### 3. Installation of the unit base and the back cover

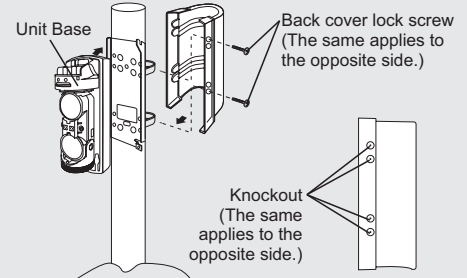

After mounting the units base, fix the back cover on the pole bracket by using the screws (4 pieces). Align the optical axis and check for the operation, then close the cover. (See "3. INSTALLATION")


## 8-3 POLE SIDE COVER : PSC-3

### 1. Cutout of the knockout

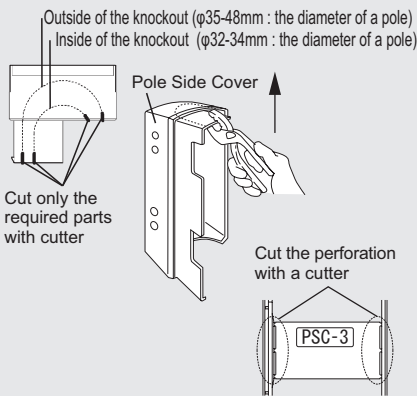

Cut the edge of the knockout (outside or inside) with a nipper and then break the knockout portion with a cutter. Also break the center bridge of the pole side cover along with the perforation.

### 2. Installation of the pole side covers

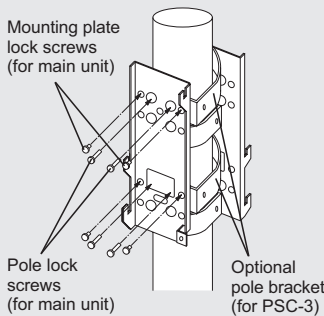


#### Note

Do not use pole bracket supplied with the unit

Fix the unit base body mounting-plate and the pole bracket for the option supplied with the pole side cover by using the supplied screws.

### 3. Installation of the pole side covers

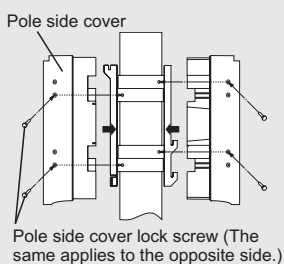


#### Note

When the pole side cover fix on the pole bracket, make sure the position of the screws.

Fix the pole side cover on the pole bracket by using the screws (8 pieces).

### 4. Mounting of the unit base

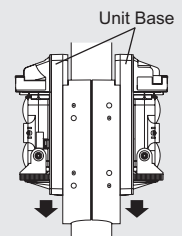

After mounting the units base, align the optical axis and check for the operation, then close the cover. (See "3. INSTALLATION")

## 9. TROUBLE SHOOTING

Problem	Possible Cause	Corrective Action
LEDs on the transmitter are not illuminated.	Inappropriate power supply voltage	Check the voltage and make sure that it is between 10.5 and 28VDC.
	Disconnection in power line	Check the wiring
	Inappropriate wiring distance or wire diameter	See "2. Wiring distance between power supply and detector" of "4. WIRE CONNECTIONS", and check the wiring distance.
"Alarm Indicator" is not illuminated even if the beam is blocked in front of the receiver.	Inappropriate power supply voltage	Check the voltage and make sure that it is between 10.5 and 28VDC.
	Inappropriate wiring distance or wire diameter	See "2. Wiring distance between power supply and detector" of "4. WIRE CONNECTIONS", and check the wiring distance.
	The beams are reflecting off the floor and wall of a building, and entering the receiver.	Align the optical axis again. If "Alarm Indicator" is not turned on yet, remove the reflecting objects or change the installation site.
	Not interrupting both upper and lower beams at the same time.	Interrupt both upper and lower beams at the same time.
Blocking the beam in front of the receiver illuminates the "Alarm Indicator" but does not activate the alarm.	Receiving any other beams from other transmitters.	Move the receiver to any other place where it does not receive any beam from other transmitters.
	Signal line short-circuited	Check the wiring
	Alarm contact welded	Repair the required. Contact the distributor or us.
"Alarm Indicator" of the receiver does not go out.	Optical axis of transmitter and receiver not aligned.	See "5-1 OPTICAL ALIGNMENT" and make realignment.
	Object blocking the beam between transmitter and receiver	Remove the object or move the unit to a place without any object that may block the beam.
Frost, snow or heavy rain cause false alarm	Optical alignment not optimized	See "5-1 OPTICAL ALIGNMENT" and make realignment.
	Object blocking the beam between transmitter and receiver	See "5-2 BEAM INTERRUPTION TIME" and set an appropriate interruption time
	Vehicle or plant blocking the beam between transmitter and receiver	Remove any object blocking the beam
	Surface of transmitter/receiver cover soiled	Clean the cover (wipe the cover with a soft cloth dampened with water or diluted neutral detergent)
Alarm activated even if the light is not blocked	Inaccurate optical alignment	See "5-1 OPTICAL ALIGNMENT" and make realignment.
	Inappropriate location of installation	Change the location

• After above inspections, if there remains any problem, contact our dealer or us immediately.

## 10. SPECIFICATIONS

Name		Photoelectric detector				
Model		AX-70TN	AX-130TN	AX-200TN	AX-100TF	AX-200TF
Range		70ft (20m)	130ft (40m)	200ft (60m)	100ft (30m)	200ft (60m)
Maximum arrival distance		700ft (200m)	1300ft (400m)	2000ft (600m)	1000ft (300m)	2000ft (600m)
Detection method		Infrared beam interruption detection				
Selectable beam frequency					4 channel	
Interruption period		Variable between 50,100,250,500msec (4 steps)				
Power input		10.5-28VDC				
Current draw (Transmitter+Receiver)		38mA (max.) T:17mA+R:21mA	41mA (max.) T:20mA+R:21mA	45mA (max.) T:24mA+R:21mA	44mA (max.) T:6mA+R:38mA	48mA (max.) T:10mA+R:38mA
Output	Alarm output	N.C. 28VDC, 0.2A (max.)			N.C./ N.O. 28VDC, 0.2A (max.)	
	Alarm period	2 sec (±1) nominal				
	D.Q.output				N.C. 28VDC, 0.2A (max.)	
	Tamper output	N.C. : open when cover is removed			28VDC, 0.2A (max.)	
Indicator	Alarm indicator (Receiver)	Alarm : ON (red), Light receiving : OFF			Alarm : ON (red) Light receiving : flicker (red) or OFF	
	Power (Transmitter)	Power ON : ON (green), Power OFF : OFF				
	Alarm memory				Memory : ON or flicker (red) (Indicator will remain lit for 55 minutes, 5 minutes after alarm output)	
Operating temperature		-31°F- +140°F (-35- +60°C) Use the optional heating unit (HU-3) under the environment of -13°F (-25°C) or less minus.				
Environment humidity		95% max				
Alignment angle		±90°Horizontal, ±5°Vertical				
Mounting		Indoor/Outdoor, Wall/Pole mounting				
Weight		22.9oz (650g)			24.7oz (700g)	
International protection		IP65				
Packages		Transmitter (×1), Receiver (×1), Pole bracket (×4), Mounting plate lock screws (×8), Pole lock screws (×8), Wall mounting screws (×4)				

Name	Heating unit
Model	HU-3
Power input	24VAC/DC
Current draw	420mA(max.) (Per 1 unit)
Thermo switch	140°F (60°C)
Operating temperature	-31°F- +140°F (-35- +60°C)
Weight	0.7oz(20g) (Heater (×2))
Packages	Heater (×2), Connector (×4), Waterproof agent

Name	Back cover
Model	BC-3
Operating temperature	-31°F- +140°F (-35- +60°C)
Weight	5.3oz(150g) (Back Cover (×2))
Packages	Back cover (×2), Optional pole bracket (×4), Back cover lock screw (×8)


Name	Pole side cover
Model	PSC-3
Operating temperature	-31°F- +140°F (-35- +60°C)
Weight	3.9oz(110g) (Pole Side Cover (×2))
Packages	Pole side cover (×2), Optional pole bracket (×4), Pole side cover lock screw (×8)

[AX-70/130/200TN, AX-100/200TF]

[BC-3]

[PSC-3]

[HU-3]

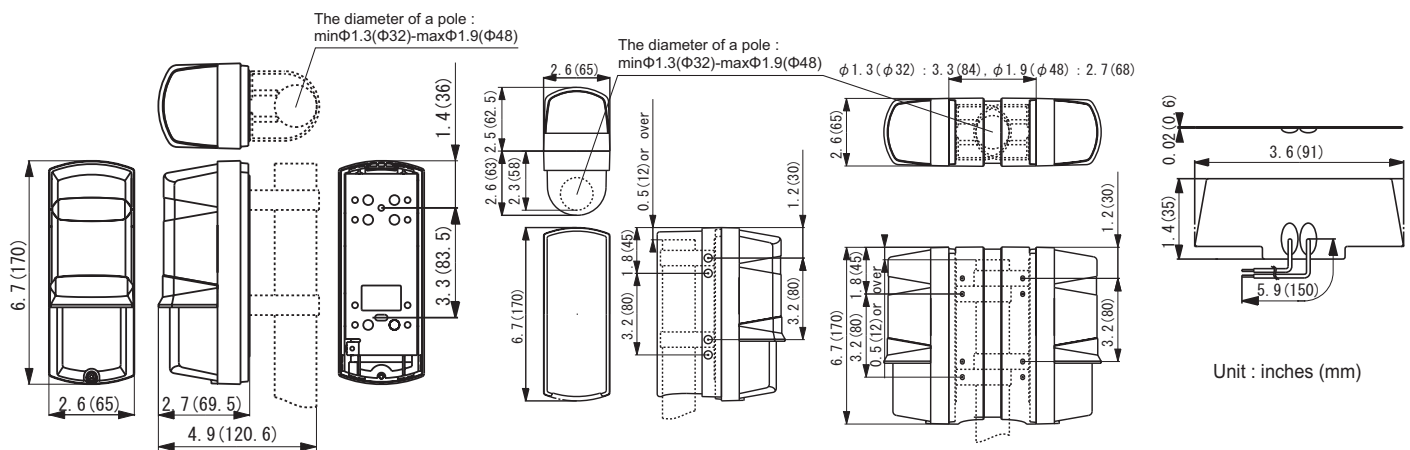

< note >

These units are designed to detect an intruder and activate an alarm control panel. Being only a part of a complete system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion.

These products conform to the EMC Directive 89/336 ECC.



**OPTEX CO., LTD.**  
(JAPAN)  
(ISO 9001 Certified by LRQA)  
(ISO 14001 Certified by JET)  
5-8-12 Ogoto  
Otsu, Shiga, 520-0101  
Japan  
Tel:+81-77-579-8670  
Fax:+81-77-579-8190  
http://www.optex.co.jp/e

**OPTEX INCORPORATED**  
(USA)  
13661 Benson Ave., Bldg.  
C.Chino,  
CA 91710 U.S.A.  
Tel:+1-909-993-5770  
Fax:+1-909-628-5560  
http://www.optexamerica.com

**OPTEX(EUROPE)LTD.**  
(UK)  
(ISO 9001 Certified by NQA)  
Clivemont Road, Maidenhead,  
Berkshire, SL6 7BU  
UK  
Tel:+44-1628-631000  
fax:+44-1628-636311  
http://www.optexeurope.com

**OPTEX SECURITY SAS**  
(FRANCE)  
Batiment Sis 475, Rue Piani  
69480  
Amberieus d'Azergues, France  
Tel:+33-437-55-50-50  
Fax:+33-437-55-50-59  
http://www.optex-security.com

**OPTEX KOREA CO., LTD.**  
(KOREA)  
1001 Sambu Renaissance-  
Tower 456,  
Kongduck-Dong, Mapo-Gu,  
Seoul Korea  
Tel:+82-2-719-5971  
Fax:+82-2-719-5973  
http://www.optexkorea.com

**OPTEX SECURITY SP.Z O.O.**  
(POLAND)  
ul.Bitwy Warszawskiej 1920  
r.7B,02-366  
Warszawa, Poland  
Tel:+48-22-598-06-60  
Fax:+48-22-598-06-61